CELLINI Italy

# Multi-Cyclonic Bagless Vacuum Cleaner
# 多重離心旋風免塵袋吸塵機
## Model No.: CVC2000S

## User Manual 使用說明書

INSTRUCTION MANUAL AND KEEP FOR FUTURE REFERENCE
請於使用前細閱本說明書並加以保存

To get the best out of your new vacuum cleaner, please read through these instructions carefully before using it for the first time. We also recommend that you keep the instructions for future reference, so that you can remind yourself later of the functions of your vacuum cleaner.

## SAFETY MEASURES

- The vacuum cleaner, cord or plug must not be placed in water or any other liquid.
- Never touch the vacuum cleaner, cord or plug with wet or damp hands.
- Never leave the vacuum cleaner unattended when it is switched on. Children should be supervised when they use the vacuum cleaner.
- Switch the vacuum cleaner off and unplug it when it is not in use, before cleaning, and before you empty the dust container or clean the filters.
- Avoid pulling the cord when removing the plug from the socket. Instead, hold the plug. Keep hold of the plug when rewinding the cord, so that it does not strike the vacuum cleaner. Keep the cord and appliance away from heat sources, hot objects and naked flames.
- To prevent overheating, the cord must be at least 2/3 unrolled if the vacuum cleaner is to be used for a long period (more than 30 minutes).
- Never use the appliance if it, the cord or the plug is damaged or if the appliance is not functioning correctly. Never use the vacuum cleaner if the filters have not been fitted.
- Only use accessories equipped by the manufacturer.
- The appliance is for indoor use only. Do not use it on wet surfaces. Take particular care when vacuuming stairs, due to the risk of falling or the vacuum cleaner falling and breaking.
- Do not use the appliance to vacuum matches, hot ashes, cigarette, sharp objects, wet or damp substances, combustible materials (petrol, solvents, etc.) or vapour from these.
- Do not cover the appliance's suction or exhaust port. Ensure that you keep clothing, hair and body parts away from the nozzle and moving parts of the vacuum cleaner.
- Never try to repair the vacuum cleaner by yourself. If the appliance, cord or plug needs to be repaired, it should be taken to our after-sales service centre.

# PARTS DESCRIPTION

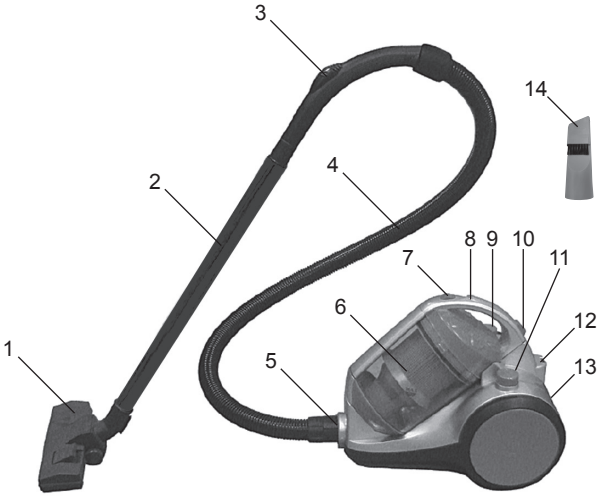


1. Floor Nozzle
2. Extension Tube
3. Airflow Valve
4. Soft Hose
5. Hose connector
6. Dust Bin
7. Dust Bin Release Button
8. Unit Handle
9. On/off Button
10. Dust Bin Unlock Button
11. Cord Rewind Button
12. Parking Holder
13. Air Outlet Grid
14. Accessory (2-in-1 nozzle)

# PREPARING THE VACUUM CLEANER

- Attach the hose to the vacuum cleaner by inserting it into the hose connector.
- Connect the two extension tubes. Fit the combined extension tube into the other end of the hose, then attach the floor nozzle to the end of the tube.
- The special 2-in-1 nozzle provided as accessory inside the box are used for particular vacuuming tasks, such as for furniture, in the car, and so on. Detach the floor nozzle and fit the 2-in-1 nozzles to the end of the extension tube.

# USE

- Pull the cord out of the vacuum cleaner. The cord must not be pulled out any further than the red mark label. Plug in and switch the power on.
- Press the on/off button to start and stop the vacuum cleaner.
- While in use, the suction strength can be regulated by opening and closing the air valve on the handle at the end of the hose.
- The floor nozzle has two settings. When cleaning hard surfaces. the nozzle brushes should be extended. When cleaning carpets and rugs, the brushes should be retracted into the nozzle. Press the brush change button to switch between the two settings.
- If you need to pause to move furniture etc during vacuuming, you can place the floor nozzle in the parking holder using the fixture on the back of the nozzle.

# FILTER

This vacuum cleaner is not equipped with a dustbag. The dust/dirt is vacuumed into the transparent dust container instead. Once the dust is in this container, it whirls around so that it does not block suction. The air vacuumed in is cleaned by means of a washable permanent filter in the dust container and a HEPA 12 exhaust filter.

# IMPORTANT

You must never vacuum without all filters in place or when a filter is damaged. If you do, dust may penetrate into the interior of the vacuum cleaner and damage the motor.

## EMPTYING THE DUST CONTAINER AND CLEANING THE PERMANENT FILTER

It is easy to see when the transparent dust bin needs emptying. The bin needs to be cleaned when dust accumulated reaches the MAX mark.

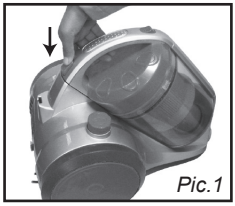
*Pic.1*

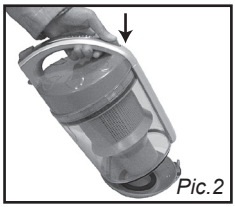
*Pic.2*

1. Turn off the vacuum cleaner, and remove the plug from the wall socket.
2. Remove the dust container from the vacuum cleaner by pressing the Dust Bin Unlock Button and lifting the handle on the dust container. (*see Pic.1*)
3. Press the Dust Bin Release Button to empty all dust easily. (*see Pic.2*)
4. Wash all in water without any detergent or similar.
5. Hold the unit handle and turn anti-clockwise direction to release the filter cover. The washable permanent filter can be take out for cleaning.
6. Allow the filter to dry completely, and replace it on the upper section by turning it clockwise direction until it clicks into place.
7. Fit the upper section on the lower section so the hole in the top of the upper section points towards the handle.
8. Replace the dust bin in the vacuum cleaner. Press down until you hear a “click” sound.

## Exhaust filter (HEPA 12)

This exhaust filter should also be cleaned regularly to maintain suction power. Take away the Air Outlet Grid and remove the filter and clean it, or replace the filter. If you use water to clean the filter, it must be completely dry before being replaced in the vacuum cleaner.

## Filter Replacement

- The standard lifespan of the filters is one year. However, it will also depend on the duration of usage and air pollution level of the surroundings.
- The filters are recommended to be cleaned using a vacuum cleaner after 3 to 4 monthes of usage.
- Please contact our after-sales service center to purchase filters for replacement.

## TRANSPORT AND STORAGE

- You can lift and carry the vacuum cleaner using the carrying handle. Never pull or lift the vacuum cleaner by the cord. Press the brush change button to switch.
- Before putting the vacuum cleaner away, rewind the cord. Switch off at the socket, unplug, and press the automatic cord rewind button until the cord is fully retracted.

## CLEANING

- Clean the vacuum cleaner by wiping it with a damp cloth.
- You must not use any form of solvent, strong or abrasive cleaning agent.
- Make sure all filters are kept clean. Replace the filters once they become worn or can no longer be cleaned.

## TECHNICAL SPECIFICATIONS

| | |
|---|---|
| Model No. | CVC2000S |
| Voltage / Hertz | 220-240V~ 50/60Hz |
| Rated Power | 2000W Max |
| Product Size (mm) | 365(L)*270(D)*300(H) |
| Net Weight (kg) | 4.5 |

為了更好的使用本吸塵機，請在使用前仔細閱讀使用説明。請保留此説明書以供將來參考本機的功能。

## 安全措施

- 吸塵機的插頭不能放在水裡或者液體裡。
- 禁止用濕手觸摸插頭.。
- 在使用吸塵機時，不能離開。 小孩需在監管下使用。
- 清洗塵桶及過濾網，需先關掉吸塵機，並拔下插頭。
- 不能拉住電源線將插頭拔下。必須手握住插頭，從插孔拔下，避免電源線敲擊吸塵機。保持電源線遠離熱源體以及明火。
- 避免吸塵機長時間運行（超過30分鐘）出現過熱情況，電源線必須至少有2/3長度拉出機身外。
- 插頭損壞，或者機器不能正常工作，應立即停用並聯絡本公司的售後服務部。
- 只可使用製造商提供的配件。
- 本機器僅適合室內使用， 不能在濕的表面工作。
- 清掃樓梯時，要特別注意安全，避免一切可能導致吸塵機跌落、摔壞的風險。
- 不可使用本機器清掃熱灰、煙頭、鋒利的物體、濕的物質、易燃原料 (汽油、溶劑、等等) 以及揮發性物質產生的水汽。
- 不能堵住進氣口和排氣口。 確保衣服、頭髮、零部件要遠離吸塵機的吸管。
- 不可私自拆卸本機。請在保修期內聯繫本公司的售後服務部，進行維修。

# 吸塵機圖解

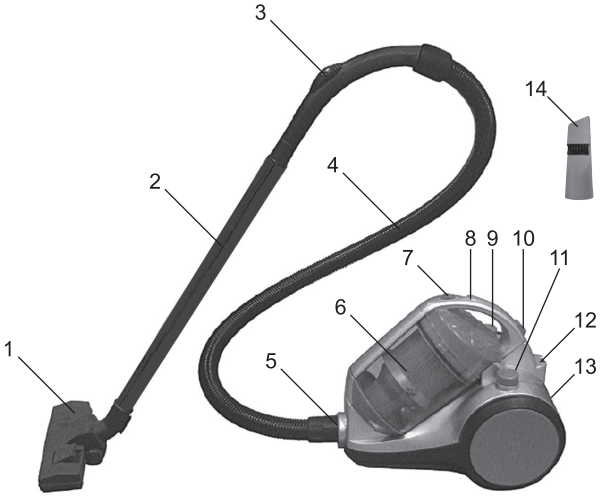


1. 地刷
2. 延伸管(2支)
3. 氣流閥
4. 軟管
5. 軟管接口
6. 塵桶
7. 塵桶釋放按鈕
8. 手柄
9. 開關按鈕
10. 塵桶蓋開鎖按鈕
11. 回捲電線按鈕
12. 掛架
13. 出風口網格
14. 配件(2合1窄縫吸嘴小毛刷)

# 預備

- 在軟管口連接軟管和吸塵機。
- 將延伸管連接軟管的另一端，並將地刷的噴嘴連接到延伸管的底端。
- 把兩條延伸管連接起來。
- 附送的2合1窄縫吸嘴小毛刷，用作特殊的清掃，例如傢俱、汽車等等。拆掉地刷，將2合1窄縫吸嘴小毛刷任意一個特殊的吸管連接到延伸管的底部。

# 使用

- 拉出電源線，拉出長度不能超過紅色標貼。插入電源插孔，並打開電源開關。
- 按下開關按鈕 ，開始或者關閉吸塵機。
- 使用時，可以通過打開或者關閉位於軟管末端手柄上的空氣閥，調節吸力的強度。
- 地刷上的吸嘴有2個設置。清潔堅硬的表面時，吸嘴需要延伸出來。清潔地毯時，將吸嘴隱藏。可以通過按住地刷轉換按鈕使2種功能互相轉換。
- 清掃過程中，需要暫停移動傢俱等，可以將地刷上的掛鉤掛在吸塵機的掛架上。

## 過濾網

本吸塵機為免塵袋吸塵機。灰塵被收集在透明桶裡。灰塵被收集到塵桶裡便高速旋轉，使進氣口通暢。通過可清洗的過濾網及HEPA12排氣過濾網淨化，排出的空氣是潔淨的。

## 重要事項

沒有過濾網或過濾網損壞時，禁止用吸塵機清掃。如果使用，灰塵會滲入吸塵機內部，導致電機損壞。

## 清空塵桶，清潔的過濾網

透明的塵桶設計方便知道何時需要清潔。當灰塵累積到MAX位置時必須清理。

1. 關閉吸塵機，從牆上的插座拔下插頭。
2. 按下吸塵機上塵桶的釋放按鈕，提起塵桶上的手柄，移走塵桶。（見圖1）
3. 按下塵桶蓋開鎖按鈕，清空塵桶內的灰塵。（見圖2）
4. 用清水清洗，不要使用洗滌劑或類似溶劑。
5. 握住塵桶的手柄，逆時針旋轉可把蓋打開並取出過濾網清洗。
6. 清洗後等過濾網完全乾透，把它放回頂部位置並把蓋順時針旋轉，直至聽到”卡”一聲並裝回原位。
7. 上下部分結合起來，讓位於上部的通氣孔朝向手柄。
8. 將塵桶放回吸塵機，直到聽到”卡”一聲才是裝置正確。

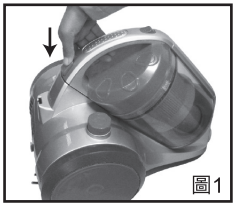
圖1

圖2

## 排氣過濾網(HEPA12)

排氣過濾網需要定期清潔，保持吸入功率。按下吸塵機背面出風口網格，取出排氣過濾網，清潔或者更換新的排氣過濾網，排氣過濾網必須完全乾透才可使用。如果用水清洗過濾網，必須使過濾網完全乾透後，才能安裝回吸塵機上。

## 更換濾網

- 濾網一般可使用一年，但也會因為使用頻率和環境污濁情況而改變。
- 建議每3-4個月用吸塵機清理濾網一次。
- 請聯繫我們的售後服務中心購買新的過濾網。

## 搬運及存放

- 握住手柄提起吸塵機，禁止拉住電源線提起吸塵機。
- 存放吸塵機前，先將電源線完全回捲原位。從插座上拔下插頭，按住回捲電線按鈕，直到電源線完全卷入機內。

## 清潔

- 通過使用濕的抹布擦拭吸塵機。
- 禁止使用任何溶劑，強性或者弱性的清潔劑。
- 保持所有的過濾網潔淨。發現過濾網磨損或不潔淨，請更換新的過濾網。

## 產品規格

| | |
|---|---|
| 型號 | CVC2000S |
| 適用電壓 | 220-240V~ 50/60Hz |
| 最高輸出功率(瓦) | 2000W |
| 產品尺寸(毫米) | 365(L)*270(D)*300(H) |
| 淨量(公斤) | 4.5 |

請記錄下列產品資料

- 型號 _____
- 機身編號 _____
- 經銷商名稱 _____
- 購買日期 _____

本產品不斷改進中，如功能有所更改，恕不另行通知，如有疑問，請與客戶服務中心聯絡，不便之處，敬請原諒。

說明書內容以英文版本為準

## ToolBox Customer Service Centre 客戶服務中心：

7/F., Goodwill Industrial Building, 36-44 Pak Tin Par Street, Tsuen Wan, N.T.
新界荃灣白田壩街36-44號信義工業大廈7樓

Customer Service Hotline 客戶服務熱線：(852) 8210 8210
Service E-mail 電郵地址：8210service@gilman-group.com
Please register now at 請即上網登記：www.toolbox.hk
Website 網址：www.gilman-group.com

Gilman
since 1841

Proudly Serviced by:
ToolBox
a Gilman Group Company

# 太平家庭電器

2/F, Shing Dao Industrial Building, 232 Aberdeen Main Road, Hong Kong
香港香港仔大道232號城都工業大廈2樓